

# RAM Mount Installation

**WITH Mounting Plate**


**Without Mounting Plate**

1



Use mounting plate or ball mount as drilling template.  
Mark hole locations with a pen.

2

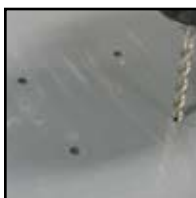

Drill holes using 13/64" or 5mm drill bit.

3



Use pan head screws, split washers, and nuts  
to secure mounting plate or ball mount to panel.

4



Attach second mounting plate with  
ball mount to ClearNav with short  
nylon standoffs

5



Tighten RAM arm to  
both ball mounts.