REV.	#	DATE	NOTES

TUNNEL MOUNT INSTALLATION TEMPLATE AND INSTRUCTIONS TEMPLATE IS INCLUDED WITH THE TUNNEL INSTALLATION OPTION

Directions


- 1. Cover the area of the panel where the instrument is to be mounted with masking tape
- 2. Locate template on panel then tape it in place
- 3. Use a 1/16" [1.5mm] drill to make six pilot holes
- 4. Use a sharp pencil or a fine point pen and mark the cutout area (5.276''[134.0 mm] x 3.622''[92 mm])
- 5. Remove the template
- 6. Use a #16 [4.5mm] drill to enlarge the <u>four mounting</u> <u>hole pilot holes</u>
- 7. Use a 5/16 [8.0mm] drill and enlarge the <u>two bottom</u> <u>corner holes of the cutout area</u>
- 8. Cut the opening for the instrument using the cutting tool of your choice




ONE OF FOUR PILOT HOLES FOR M4 x .7 MOUNTING SCREWS-

0

MATERIAL FINISH	0.030"	PETG	
FINISH			

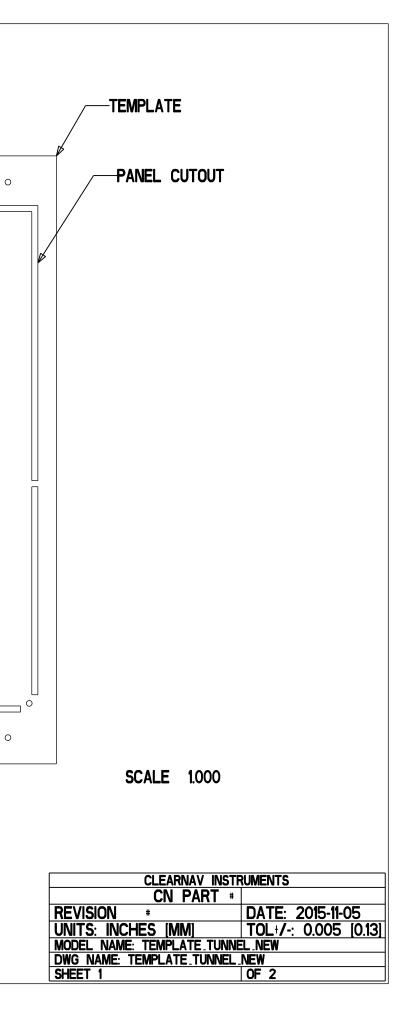

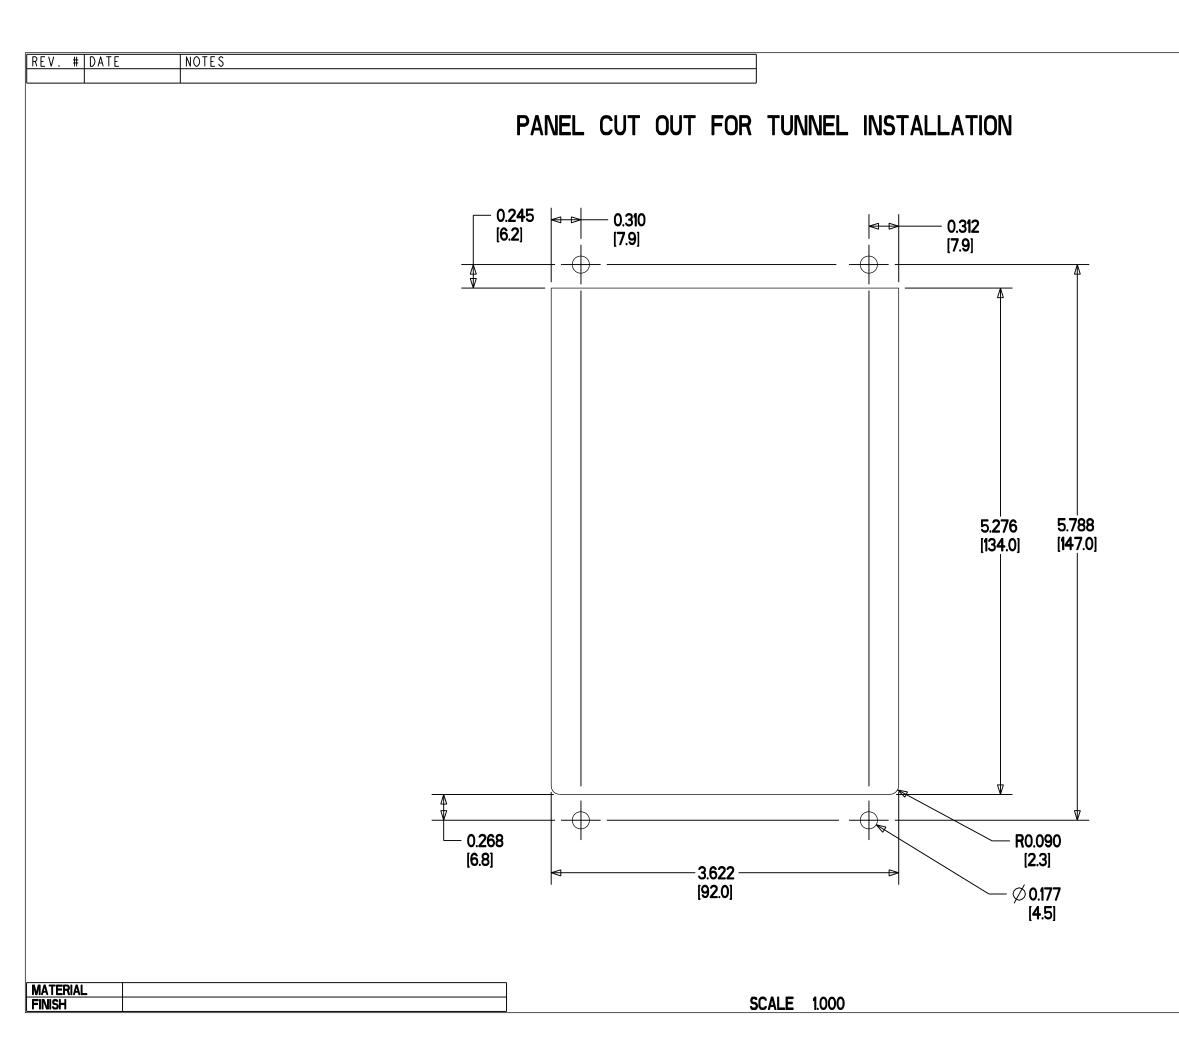

CLEARNAV INSTRUMENTS					
CN PART *					
REVISION #	DATE: 2015-11-05				
UNITS: IN [MM]	TOL+/-: .01 [.25]				
MODEL NAME: TEMPLATE_TUNNEL.NEW					
DWG NAME: TEMPLATE_TUNNEL_NEW					
SHEET 2	OF 2				